hipstreet

AEON

WCH552

Digital Sport Watch MP4 Player & Pedometer

QUICK START GUIDE

www.hipstreet.com

AEON

552 SERIES/SÉRIE

Getting started

Thank you for your purchase of this Hipstreet® Digital Sport Watch MP4 Player & Pedometer. This manual is designed to help you easily set up and begin using your new device right away. Please read this manually carefully and be sure to retain it for future reference.

We hope this high quality product offers you endless hours of entertainment. Please visit our website at **www.hipstreet.com** for any questions or additional information you may need.

What's in the box:

- **A** 1 x Digital Sport Watch MP4 Player & Pedometer
- **B** 1 x Earphones
- **C** 1 x USB charging cable

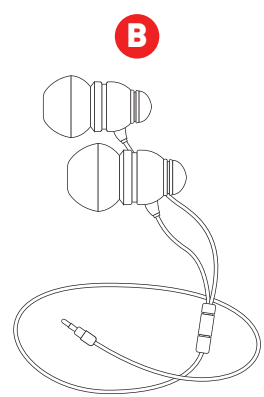

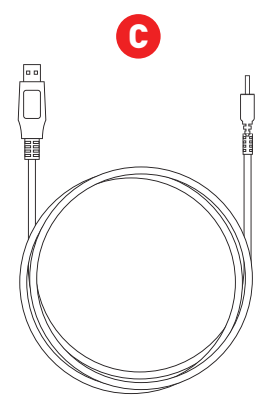

Getting started

Getting to Know Your Digital Sport Watch MP4 Player & Pedometer:
Easy-to-Use Controls

Button Functions:

1. USB/Earphone Socket
2. Previous/Rewind/Vol–
3. Next/Forward/Vol+
4. Menu
5. Play/Stop/Power & Confirm
6. Volume/Clock
7. Screen
8. Reset Button

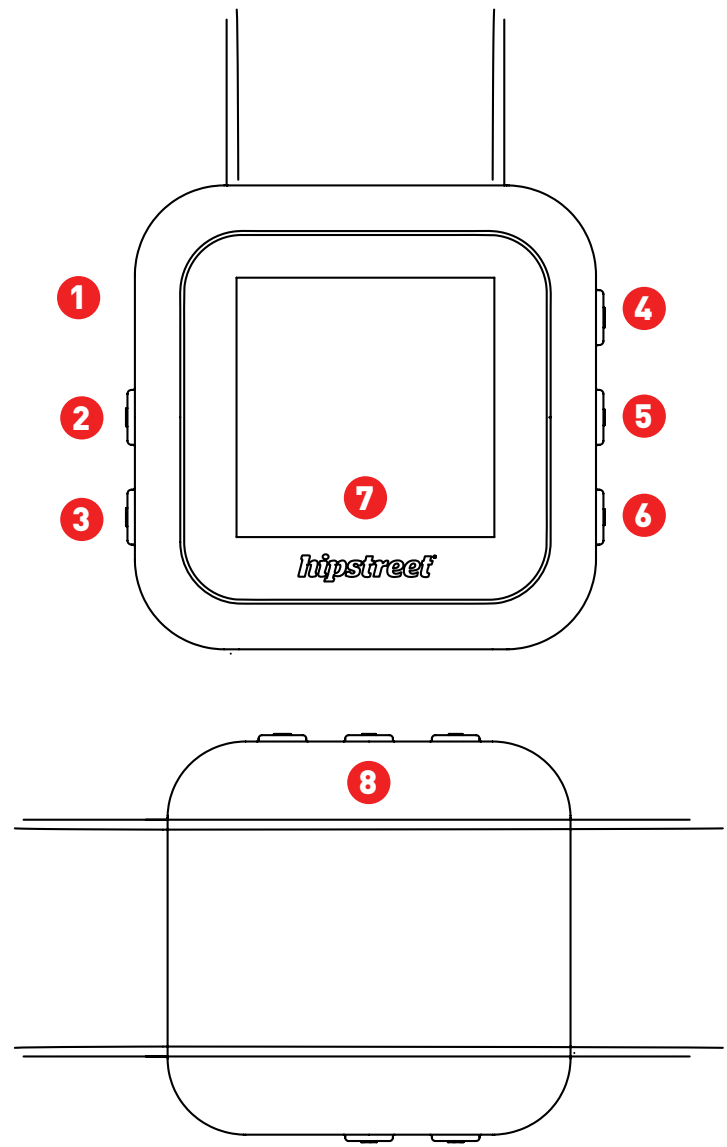

Features

- 1.5-inch TFT screen display with 128x128 pixel resolution
- 4GB memory capacity
- Pedometer functions: measures steps, calculates distance and calories, keeps track of history list and max score, and supports daily goals
- Sport watch functions: chronometer, stopwatch, and lap timer
- Shake-to-shuffle music function
- Plays AVI video files
- Plays MP3 and WMA music files
- Supports picture browsing of JPEG files
- Supports TXT E-book files
- Integrated 400mAh Li-ion Battery
- Multiple languages supported

Basic Operations

Power On / Power Off:

Press and hold the ▶⏸/⏻ button for 3 seconds to power on or power off the device.

Volume/Clock:

Short press **V** button to adjust the volume

Long press **V** button to enter the Clock mode

Charge / Connect / Disconnect from PC

Connect the device to PC via USB Cable to use it as a removable disk.
To charge the device or disconnect the device, press ▶⏸/⏻ button when USB is connected.

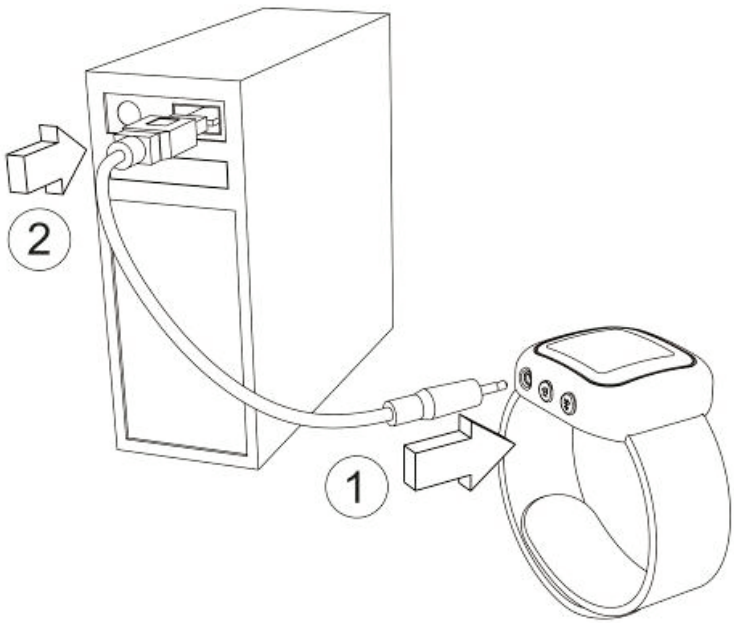

Note:
Please use the supplied
USB cable to connect the player to PC.
As shown in the picture:
(1) Plug into the device first, then (2) plug into the PC.

Main Menu

1. Press **M** MENU button to enter main menu. Press ⏮ or ⏭ button to browse through the nine modes on main menu.

MUSIC	MUSIC	MUSIC	MUSIC	MUSIC	MUSIC	MUSIC	MUSIC	MUSIC
RUN	**RUN**	RUN	RUN	RUN	RUN	RUN	RUN	RUN
HISTORY	HISTORY	**HISTORY**	HISTORY	HISTORY	HISTORY	HISTORY	HISTORY	HISTORY
CLOCK	CLOCK	CLOCK	**CLOCK**	CLOCK	CLOCK	CLOCK	CLOCK	CLOCK
STOPWATCH	STOPWATCH	STOPWATCH	STOPWATCH	**STOPWATCH**	STOPWATCH	STOPWATCH	STOPWATCH	STOPWATCH
MOVIE	MOVIE	MOVIE	MOVIE	MOVIE	**MOVIE**	MOVIE	MOVIE	MOVIE
TEXT	TEXT	TEXT	TEXT	TEXT	TEXT	**TEXT**	TEXT	TEXT
IMAGES	IMAGES	IMAGES	IMAGES	IMAGES	IMAGES	IMAGES	**IMAGES**	IMAGES
SYSTEM	SYSTEM	SYSTEM	SYSTEM	SYSTEM	SYSTEM	SYSTEM	SYSTEM	**SYSTEM**

Music Mode

1. Choose "Music" in the main menu. Press ▶Ⅱ/⏻ button to confirm and enter.
2. Press ▶Ⅱ/⏻ button to play the selected music.
3. While the music is playing, press **M** button to enter sub-menu:

Pause a song:	Press ▶Ⅱ/⏻ The screen displays Ⅱ
Play a paused song:	Press ▶Ⅱ/⏻ The screen displays ▶
Play the previous song:	Press ⏮ button
Play the next song:	Press ⏭ button
Fast forward a song:	Press and hold ⏭ button. The slide-bar will move to the right
Rewind a song:	Press and hold ⏮ button. The slide-bar will move to the left
Repeat / Shuffle songs:	Press **M** button. Select 🔁 / 🔂 / 🔀 🔁 : Repeat all songs in the current album or list. 🔂 : Repeat only the current song over and over. 🔀 : Shuffle songs

Note:
When listening to music, shake the device to shuffle as an alternative to selecting the 🔀 option.

4. Press ▶Ⅱ/⏻ to stop playing, then press **M** to enter into the following sub-folders:

Local folder:	Indicates the folder of current playing song
Delete file:	Delete the current playing song
Delete all:	Delete all songs
Next Set:	Scroll through playlist and select repeat or shuffle options

5. If you want to delete a song, choose "delete file". Then select the file you want to delete by navigating to **YES** using ⏮ or ⏭ and ⏯ to confirm.

6. To change the music settings: go to Main Menu, choose **"System"** mode, and then choose **"Music"**.

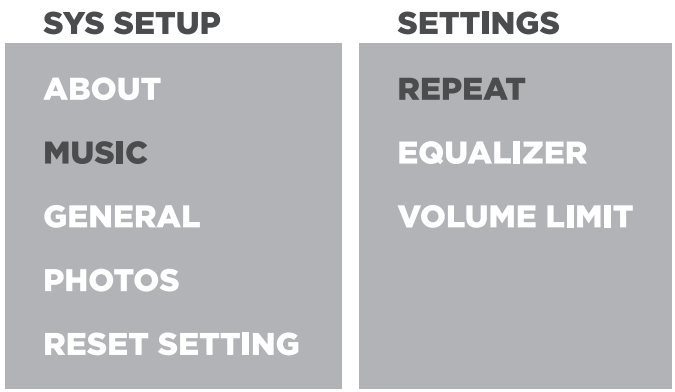

Repeat:	Normal\ Repeat One\ Repeat All\ Random
Equalizer:	Natural \Rock \Pop \Classic \Soft \Jazz\Wow\ 3DSOUND
Volume Limit:	0-31

Run Mode

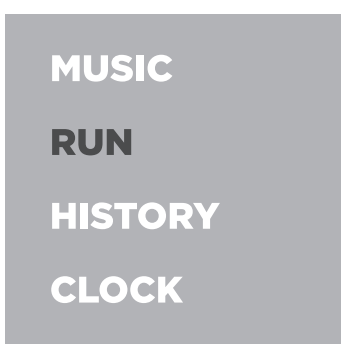

1. Choose **"Run"** in the main menu.

2. Press ⏯ / ⏻ button to confirm and enter Pedometer mode.

3. Select "Weight" to enter your weight. Press ⏮ or ⏭ button to adjust the value and then press ⏯ to confirm.

4. Select **"Step"** to set your average step distance. Press ⏮ or ⏭ button to adjust the value and then press ⏯ / ⏻ to confirm.

5. Select **"Daily Goal"** to set your target steps. Press ⏮ or ⏭ button to adjust the value and then press ⏯ / ⏻ to confirm. The device will remind you with music when you have reached your daily goal.

6. Once your details have been entered, select **"Pedometer"** to enter pedometer function.

7. Press ⏯ / ⏻ button to begin. A running person icon will appear when this feature is activated. The total steps taken will be displayed in the black band in the middle of the screen.

8. Press ⏮ or ⏭ button to toggle between total Kilometers, Calories or Time that have been traveled, burned or elapsed.

9. When you have finished your session, you have the option to save your data (and to add to it at a later time). Press ⏮ or ⏭ button to make your selection and the ⏯ / ⏻ button to confirm your choice.

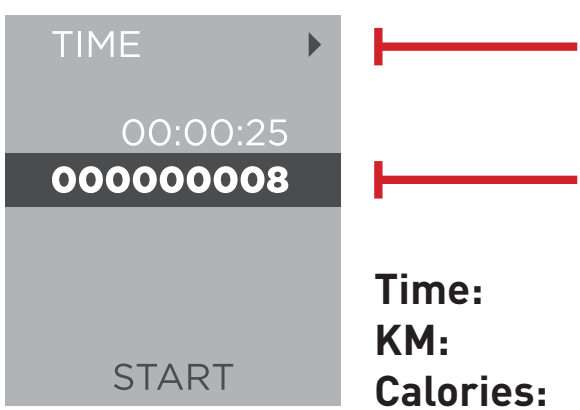

Press ⏮ or ⏭ Button to select Time, KM or Calories

Step count

Time: Total time the pedometer has been on
KM: Total route
Calories: Total calories burned

History Mode

1. Choose **“History”** in the main menu. Press ⏯ / ⏻ to confirm and enter.

2. Select **“Max Score”** to review the details of the highest score such as distance, steps, time or calories.

3. Select **“History”** to review all saved data files sorted by date.

Steps:	Total steps for each event
Time:	Total amount of time for each event
Calories:	Total amount of calories for each event
KM:	Total KM for each event
Total:	Total amount of calories for all events

4. Select **“Inquiry”** to check the history data of a particular date.

Clock Mode

1. Choose **“Clock”** in the main menu. Press ⏯ / ⏻ to confirm and enter.

2. To set the date & time of the device, go to Main Menu, choose **“System”** mode, then choose **“General”**, and then choose **“Date & Time”**. Use the ⏮ or ⏭ buttons to adjust accordingly and **M** to toggle between fields. Press ⏯ / ⏻ to confirm and enter when the **“Done”** option is selected.

SYS SETUP	GENERAL
ABOUT	DATE & TIME
MUSIC	SETTINGS
GENERAL	BLACK
PHOTOS	BRIGHTNESS
RESET SETTING	LANGUAGE

Stopwatch Mode

1. Choose **“Stopwatch”** in the main menu. Press ⏯ / ⏻ to confirm and enter.

2. Press ⏮ or ⏭ button to toggle between **“Start”** and **“Reset”**.

3. While **“Reset”** is highlighted, press ⏯ / ⏻ to reset the stopwatch.
3. While **“Start”** is highlighted, press⏯ /⏻ to start the stopwatch timer.

While **"Stop"** is highlighted, press ⏯ / ⏻ to stop the stopwatch timer. You can repeatedly press ⏯ / ⏻ to restart and to stop the stopwatch timer without losing the current data.

4. While the stopwatch timer is running, press ⏮ or ⏭ button to toggle between normal mode or **"Lap"** mode. While **"Lap"** mode is on, each press of ⏯ / ⏻ button will record the lap number and the lap time of each lap.

5. If there are multiple lap times recorded, press **M** button to display lap information and to stop the stopwatch timer. Use the ⏮ or ⏭ buttons to scroll down the lap time list.

6. Exit this feature to reset the timer and delete the saved data.

Movie Mode

1. Choose **"Movie"** in the main menu. Press ⏯ / ⏻ to confirm and enter.

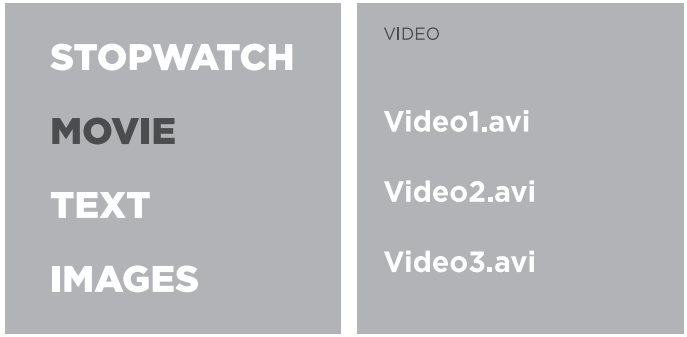

2. Press ▶II /⏻ to start and stop a video. Press **M** to exit and return to the "Video" list.

Text Mode

1. Choose **"Text"** in the main menu. Press ▶II /⏻ to confirm and enter.

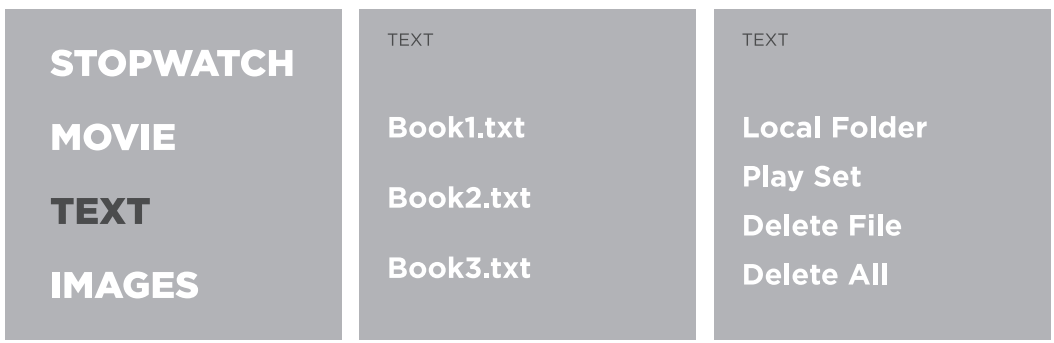

While browsing file folders, press **M** to enter into the following sub-folders:

Local Folder:	Choose the folder where picture is saved
Play Set:	Manual play/auto play
Delete File:	Delete Text
Delete All:	Delete All

While reading a text file, press **M** to enter into the following sub-folders to add, delete or select a Bookmark:

Bookmark Select :	Select a Bookmark
Bookmark Delete:	Delete a Bookmark
Bookmark Add:	Add a Bookmark

Images Mode

1. Choose **"Images"** in the main menu. Press ⏯ / ⏻ to confirm and enter.

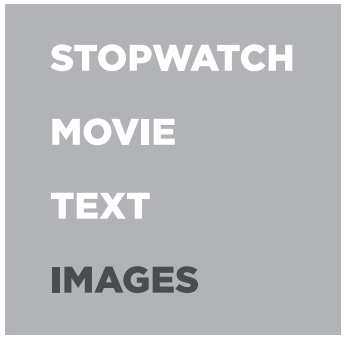

2. Press ⏮ or ⏭ select to see more thumbnails. Press ⏯ / ⏻ to confirm to view a full sized picture.

3. To change the Photos settings: go to Main Menu, choose **"System"** mode, and then choose **"Photos".**

System Mode

1. Choose **“System”** in the main menu. Press ⏯ / ⏻ to confirm and enter.

2. System settings allow you to choose the language displayed, adjust the date and time, adjust the brightness of the screen, and adjust the screensaver time.

3. Press ⏮ or ⏭ button for navigation and then press the ⏯ / ⏻ button to confirm your choice.

Video Conversion Tool

This device supports AVI (128x128) video format files. The ”video conversion tool” supplied with this player can convert most of the video format files into AVI (128x128) video format. This “video conversion tool” could be found in one of the following locations: (i) a CD driver in the package, or (ii) a file folder inside the Player.

Step 1: Installing the converter tool:

Copy the installation file from the player (or CD) to your computer desktop.

Double click it to install the tool, and a shortcut will created on your desktop.

Step 2: Converting video:

Double click the shortcut to open the program.

Add a video file you wish to convert.

Once video is added, open **“Advanced configuration”** to change the proper resolution.

Select 128 x 128 from the VideoSize drop-down, then save and exit.

Click **“Convert ”** to start.

After conversion is completed, you can find the file at the same location where the original video is saved.

Troubleshooting

Symptoms	*Tips*
No Power:	Check battery level. Recharge the battery if required.
Unable to play files:	Ensure that the file is in a compatible format. Convert the files into compatible formats if required.
Unable to locate files:	Check to see if the file is stored in correct directory.
No music is heard in the earphones:	Check the volume level. Check the connection (earphone to the earphone jack) or check if your music file is compatible with your device.
Not charging:	Ensure that the USB cable is properly connected to the PC and to the device.
Unable to download music:	Ensure that you have enough space on your device to download the music file. Ensure that the USB cable is properly connected to the PC and to the device.
Computer not recognizing device:	Ensure that the USB cable is properly connected to the PC and to the device. Try plugging the USB cable into one of other USB ports of PC.

Contact us

Need assistance? Please contact us!

For troubleshooting and support, please visit our website at **www.hipstreet.com** and check our Support section to view Frequently Asked Questions (FAQ's), video tutorials and more.

If these resources do not quickly resolve the problem, please call or email us. Our Technical Support representatives are ready to help.

Phone: 1-888-456-2426
Monday to Friday: 8:30am – 5:00pm EST

Email: support@hipstreet.com

Web: www.hipstreet.com

We want you to start enjoying your product right away!

FCC/IC WARNING:
This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and the Canadian ICES-003. Operation is subject to the following conditions:
- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation

Important Safety and Usage Instructions

Read Instructions:
All the safety and operating instructions should be read before the product is used.

Retain Instructions:
The safety and operating instructions should be retained for future reference.

Heed Warnings: All warnings on the product and in the instruction manual should be adhered to.

Follow Instructions: All operating and usage instructions should be followed.
Cleaning: Turn off the player before cleaning. Do not use chemical solvents, liquids, cleaners or abrasive materials to clean the product. Use a dry cloth for cleaning if needed.

Extreme Temperatures: Avoid using this player in extreme heat or cold, and store away from heat sources, direct sunlight and humid or dusty conditions.

Water and Moisture: Do not submerge this player in water and avoid spilling liquids of any kind on the product to prevent malfunction.

Servicing: Do not attempt to service or disassemble the player yourself, as this may expose you to hazards and will void the warranty.

Care: Avoid dropping player or placing on/near magnets to prevent damage.

Disposal: Avoid disposing of player in extreme heat conditions to avoid explosion.

Battery Life: Player battery life and length of use may vary under different usage conditions.

File Back Up: Remember to back up files regularly. We will not be liable for the loss of data due to improper operation, repair or other causes.

Safe Listening Levels: Be sure to limit earphone use to safe listening levels, particularly over a prolonged period of time to avoid hearing damage. Do not use earphones while driving an automobile or riding a bicycle to avoid accident.

Storage: Do not hang the player by its earphones or cables to avoid damage.

Re-charging: Do not charge the player for longer than three hours unattended.

Other software: Do not install any additional software onto the player.

Safety: Do not allow young children to use the player while unsupervised.

MediaMonkey

Device is pre-loaded with MediaMonkey

MediaMonkey will help you manage and play very large music collections, consisting of a variety music formats (MP3, WMA, AAC/M4A/M4P, OGG, APE, FLAC, MPC, VQF, WAV files) and/or audio CDs. MediaMonkey gives you a capable, yet nimble tool to organize, tag, create playlists, rename files, convert file formats, sync, level volume, and more.

For questions or support using MediaMonkey, please visit:
http://www.mediamonkey.com/support

AEON

552 SERIES/SÉRIE

hipstreet

North America: **1 888 456 2426**

UK: **0800 051 8330**

Netherlands: **0800 404 0006**

Germany: **0800 180 7686**